# **Quick Start Guide—KST200e/300e Auto**

anago ensure optimum sharpness

QSG Auto A3 Ver3.0

www.anagosharp.com



Wear cut-resistant or chain mail gloves when handling blades


#### **Calibration Frequency**

Weekly / Fortnightly

#### Limit Setting Frequency

First use, then as required

### **Clamp the Blade**

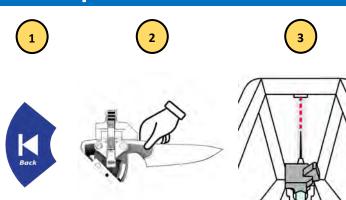

Fasten the Retract the knife clamp

knife with the clamp

Ensure blade is aligned with center of test media


## **Set the Limits**



Move the media to the side of the blade

Until the blade

is past the test media

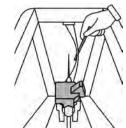

3.Top Limits **∢**Esc \$Next

To save

Set Top Limit ∢Esc Up¢Dn Save⊳


Until the blade no longer touches the test media


To save


To exit setup menu

#### Run a Test with a PC




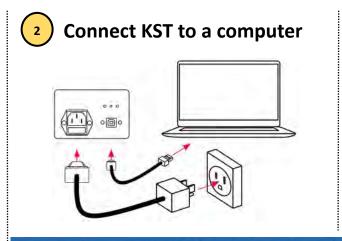

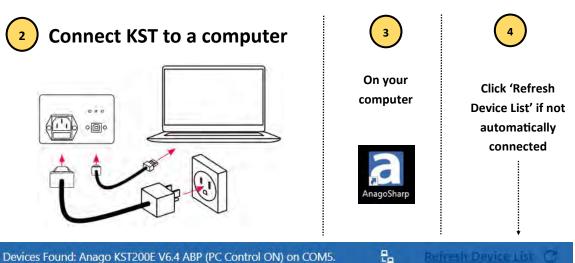


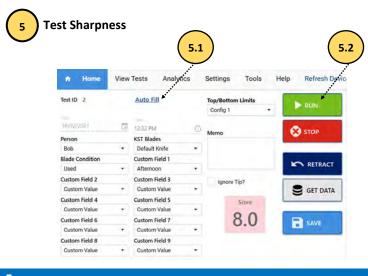



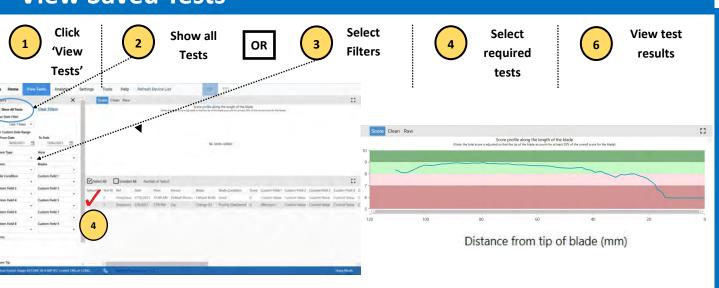


# Run a test without a PC

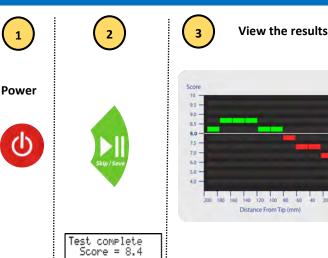

### **Load Cell Calibration**




Remove knife and ensure
























Load new test media according to the diagram

1

**Undo both black** 

thumb screws

and

remove



2

**Pull remaining** 

media upwards

through top

clamp

**Replace Test Media** 

Insert end of test media into 90° slot in top core




3

Move the


empty black

Re-attach the media covers

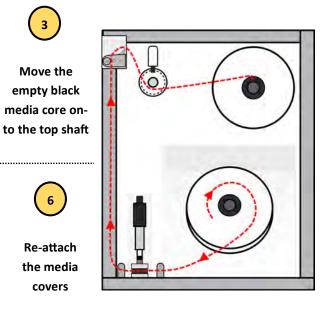





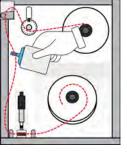



8





